




Nintendo WaveBird Wireless Controller Buttons Replacement

Remove the following buttons from the Nintendo WaveBird Wireless Controller: A, B, X, Y, Z, D-Pad, Power Switch, and Start button.

Written By: Douglas

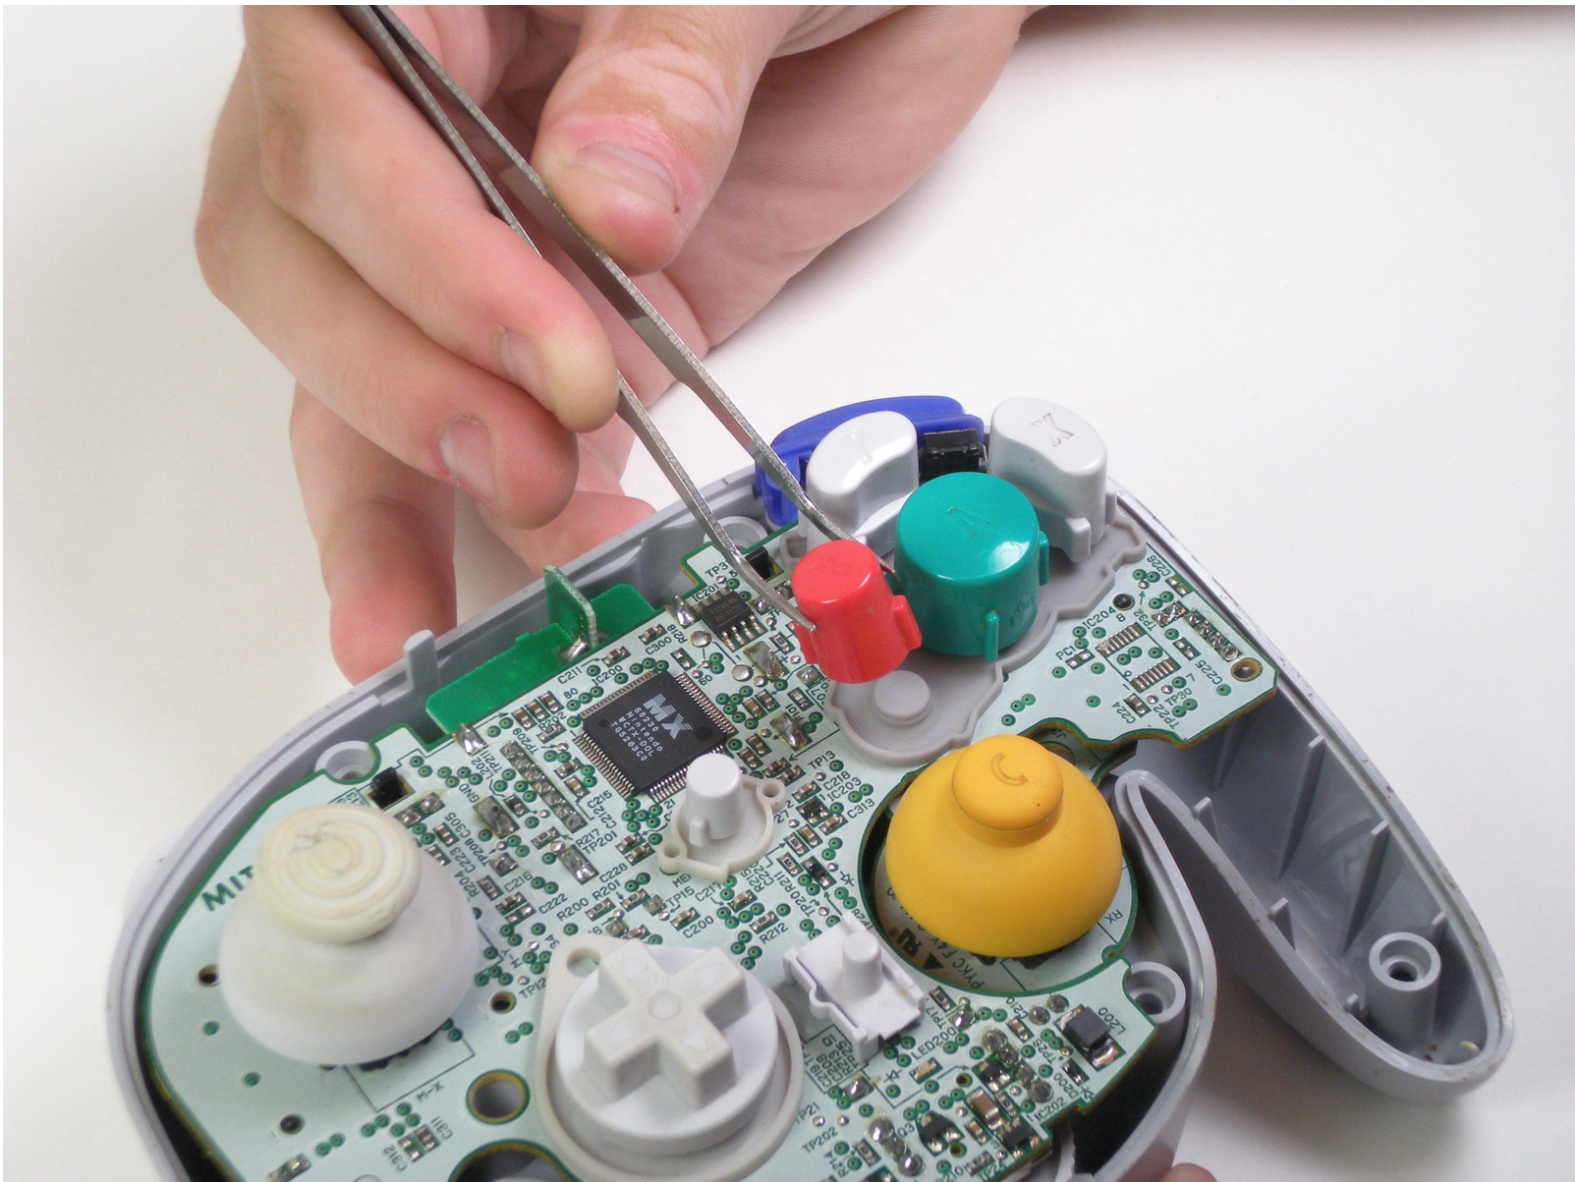

INTRODUCTION

This guide will teach you how to replace defective buttons. You may need to clean under the buttons if you have [sticky buttons](#).



TOOLS:

- [Y1 Tri-wing Screwdriver](#) (1)
- [Tweezers](#) (1)

Import tools from prerequisite guide.

Step 1 — Batteries



- Pull down on the battery cover release lever and pull back to remove the cover.

Step 2



- Take out each battery then put the covering back on.

Step 3 — Front Panel



- Remove the eight 9-mm Tri-Wing screws on the back panel with the Tri-wing Y1 screwdriver.
- ⓘ During reassembly, firmly hold the panels of the controller together while replacing screws so the panels don't separate.

Step 4



- After each screws has been removed carefully turn over the controller, and place on a flat surface.
- Slowly separate the top panel from the bottom panel.
- ✦ The buttons are loose and may fall off of the motherboard.
- Once seperarted set aside the top panel.
- ⓘ During reassembly, make sure the front panel lines up with the buttons so they slide back into place.

Step 5 — Buttons



- Use tweezers to remove the buttons.

i It may be easier to remove the A button off of the pad by lifting it with your fingers.

★ During reassembly, make sure all buttons are in their respective sockets so they match up with the front panel.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 10:28:44 PM.